 




DISH DRYER OWNER'S MANUAL

Model SD- 1502

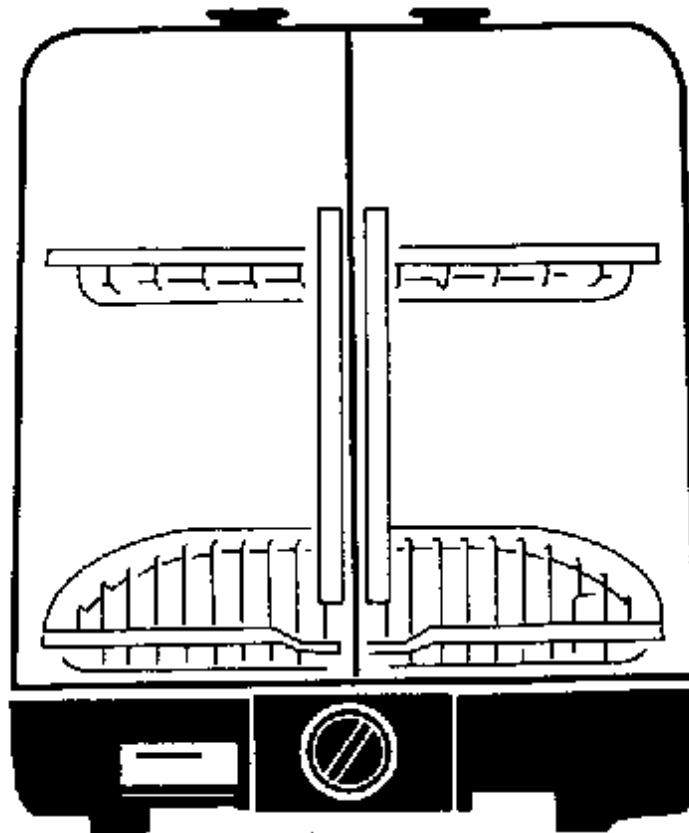

NOTE: AFTER READING THIS MANUAL, IF YOU HAVE ANY QUESTIONS OR COMMENTS ON YOUR SUNPENTOWN DISH DRYER HUMIDIFIER, CALL 1- 909-468-5288

(THIS UNIT CANNOT BE USED IN FOREIGN COUNTRIES AS DESIGNED FOR USE IN USA ONLY)

 **SUNPENTOWN INTERNATIONAL INC.**

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS DISH DRYER

 
 
When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Always place this dish dryer on a firm, flat and level surface. This dish dryer may not work properly on an uneven surface.
2. Place this dish dryer in an area where it is not accessible to children. Do not cover it.
3. Do not place the dish dryer near any heat sources such as stoves, radiators, heaters or high moist, freezing areas.
4. Do not move the dish dryer while it is operating. Unplug and take out the tableware before moving.
5. Do not over load or place too many heavy objects inside, doing so may deform the housing.
6. Do not place painted or non-heat resistant tableware into device, which may discolor and/or deform the tableware.
7. Make sure to use attached tableware shelf.
8. Do not block the heating outlet. This will damage the device itself.
9. Do not pour water into the heating outlet.
10. Do not dip the dish dryer in water.
11. **DO NOT** touch the heating outlet. Heating can cause burns.
12. This dish dryer requires regular cleaning.

BEFORE using the dish dryer, check the power cord for any signs of damage. If the cord is found to be damaged, **DO NOT USE** and return the dish dryer to the manufacturer under the warranty agreement for repair.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.**

Plug the dish dryer into a 120V AC electrical outlet and turn control to the **ON** position. To disconnect the dish dryer, first turn control to the **OFF** position, grip the plug and pull from the wall outlet. Never pull the plug by the cord.

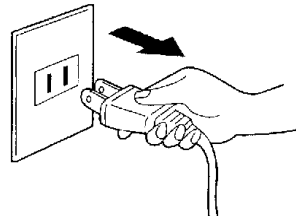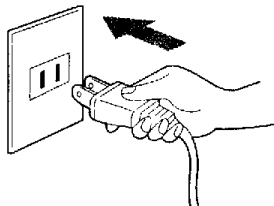

A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.

Never tilt or attempt to move the humidifier while it is operating or filled with water. **UNPLUG** the dish dryer before moving.

INTRODUCTION

 
Thank you for purchasing SPT DISH DRYER.

HOW DOES IT WORK?

As air is pulled into the unit, it first passes through the Heat System where it is heated. The hot air is then pulled into the unit's interior where it circulates and dries the dishes.

MODEL SD-1502:

Your dish dryer is made up of these parts:

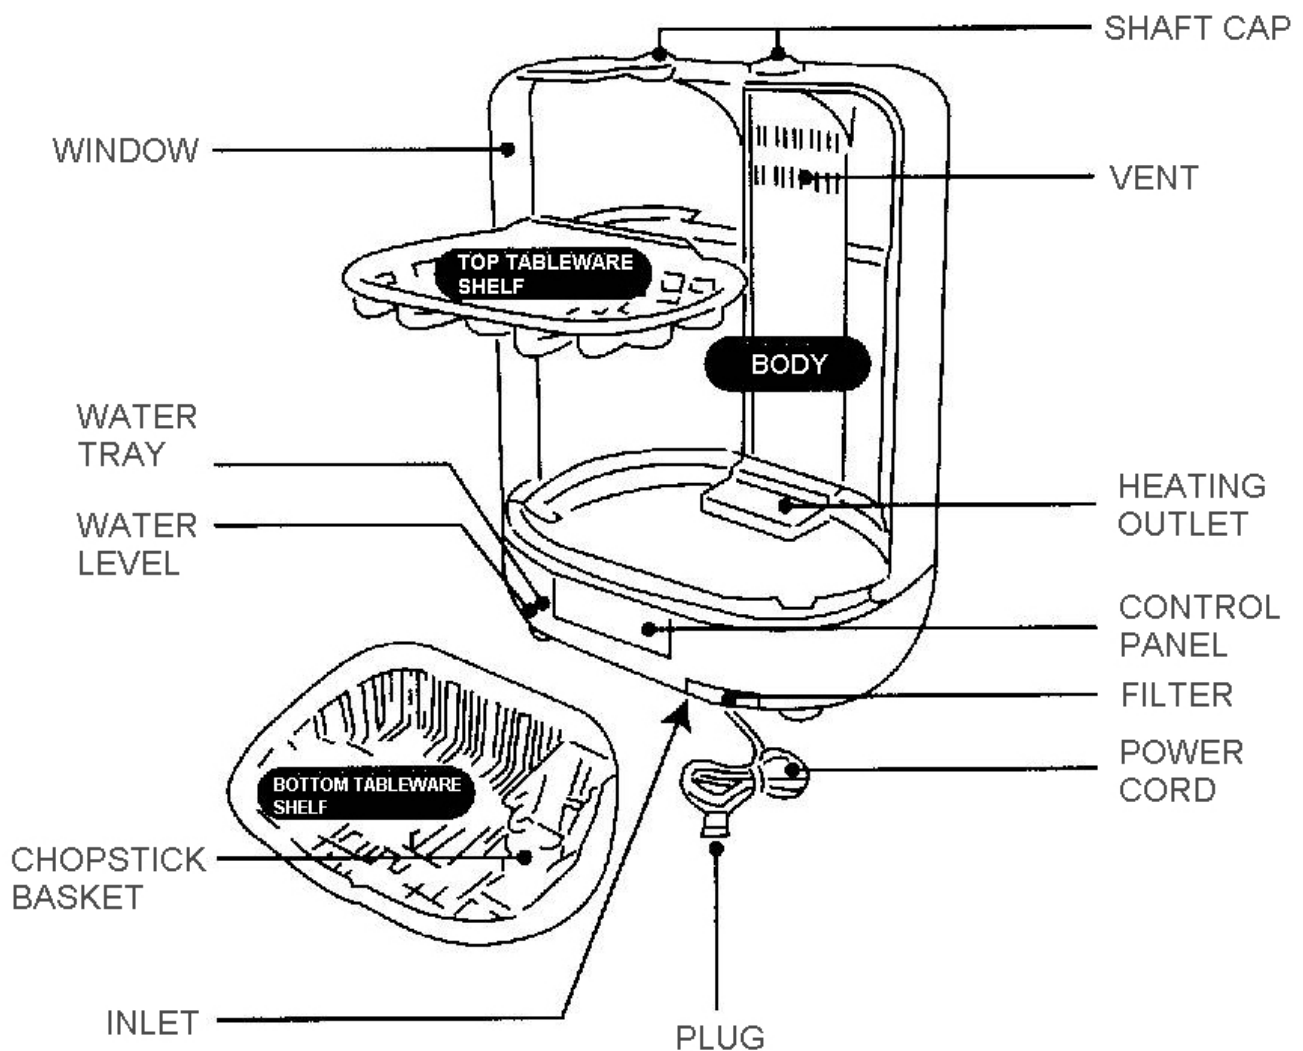

SETUP

- Select a firm, level, and flat location - at least six inches (15 cm) from wall or cabinets for proper airflow. Place the dish dryer on a water-resistant surface, as water can damage furniture and flooring.

CAUTION: DO NOT POUR WATER INTO THE HEATING OUTLET INSIDE THE DISH DRYER. DOING SO MAY DAMAGE THE DEVICE OR CAUSE PERSONAL INJURY.

 
OPERATION

POWER

CAUTION: DO NOT PLUG IN THE DISH WASHER WITH WET HANDS AS AN ELECTRICAL SHOCK COULD OCCUR.

- Plug the dish dryer into a polarized 120V outlet. **DO NOT FORCE THE POLARIZED PLUG INTO THE OUTLET**; it will only fit one way.

TIMER SWITCH

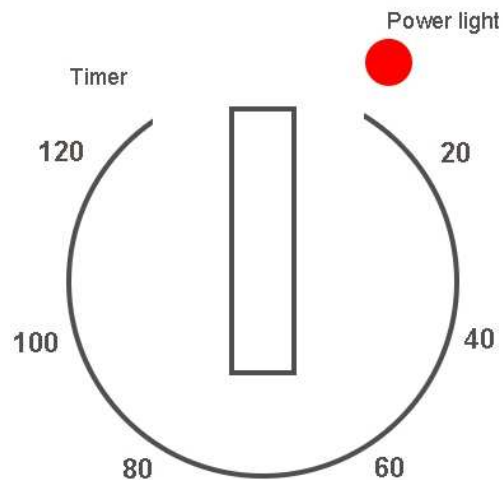

- Turn the timer switch to the desired time setting, between 0 ~ 120 minutes.
- The power light will come **ON**.
- Once the timer is off, the power light will go **OFF** as well.

MONTHLY CLEANING

 
We recommend cleaning the dish dryer monthly.

The **WATER TRAY** should be checked often. Please pour out water once the tray is full.

- Turn off and unplug the dish dryer. Wait at least 10 minutes for the unit to cool.

CLEANING

REMOVE THE DOORS

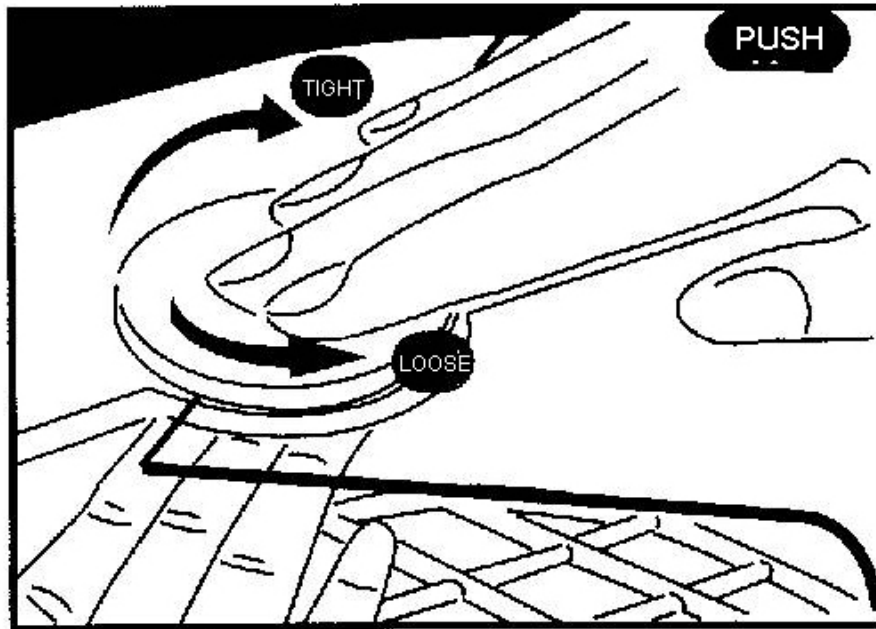

- Remove the shaft cap by turning counterclockwise.
- Remove the doors and set aside.
- Clean the dish dryer inside.

DO NOT clean the dish dryer while in operation. Doing so may cause damage or personal injury.

TROUBLESHOOTING

PROBLEM

Unit will not start when Timer Switch is **ON**.

SOLUTION

1. Check to be sure that the power cord is plugged into a 120V. AC outlet.
2. Check the electrical outlet by plugging in a working appliance.

TECHNICAL SPECIFICATIONS

Model	SD- 1502
Width	10.63in
Depth	8.07in
Height	14.76in
Weight	8.42lbs
Input Voltage	120 volts AC, 60Hz, 200W

CUSTOMER ASSISTANCE LINE

If you experience a problem, please see the warranty for information. Please DO NOT attempt to repair this unit yourself. Doing so, will void your warranty and could cause damage to the fan or personal injury to yourself. If you have any questions concerning this appliance, please call: **1- 626-336-2299**



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.

14625 Clark Avenue, City of Industry, CA 91745

Tel: 626-336-2299 · Fax: 626-336-7116

service@sunpentown.com

www.sunpentown.com